
The Installation of Spares for M200 Series Flow Computers

These spares must only be installed by Spirax Sarco personnel, as specialist knowledge is required to ensure safety and correct functioning. Contact your local Spirax Sarco Engineer who must carry out the installation for you.

WARNING

**Installation by unauthorised personnel
may cause injury and/or damage the equipment.
It will also invalidate any warranty.**