

# spirax/sarco®

## L Series Control Valve Spares

Note: When placing an order for spares please indicate clearly the product date code (found on the label of the valve body e.g. F9) to ensure that the correct parts are supplied.

### Spare parts

The spare parts available are in heavy outline. Parts drawn in broken line are not supplied as spares.

These spares are for sizes 1/2" to 4" (DN15 to DN100).

### Available spare

Actuator clamping nut	A
Gland seal kit for 1/2" to 2" only (gasket, chevrons, spring, upper and lower bearings, 'O' ring and gland nut)	B
Gland seal kit for 2-1/2" to 4" only (gasket, chevrons, guide bush and spring)	B1
Graphite gland seal kit (graphite stem seals and stuffing box gasket)	C
<b>Note:</b> The graphite gland seal kit is suitable for stuffing box and bonnet designs.	
Stem, plug and bonnet gasket	D, E
Bonnet gasket (set of 3)	E
Seat, seat gasket and bonnet gasket	F, G, E

### How to order spares

Always order spares by using the description given in the column headed 'Available spares', stating the following information and the date code of the product.

### Control valve selection guide

Valve size	1/2" to 4" (DN15 to DN100)	1"
Valve series	L = 2-port	L
Valve characteristic	E = Equal percentage F = Fast opening	E
Design series	A = ANSI/ASTM	A
Body material	3 = Cast iron	3
Connections	1 = Screwed NPT 3 = Flanged ANSI 125	3
Stem sealing option	H = Graphite packing	
Sealing option	G = Soft seal (PTFE)	
Cv	To be specified	C <sub>v</sub> 11.7
Connection type	To be specified	ANSI 125

  

1"	L	E	A	3	3		C <sub>v</sub> 11.7	ANSI 125
----	---	---	---	---	---	--	---------------------	----------

**Example:** 1 - Gland seal kit for 1" LEA33 C<sub>v</sub> 11.7 flanged to ANSI 125. Date coded F9.

### How to fit spares

Full fitting instructions are given in the Installation and Maintenance Instructions supplied with the spare.

