

spirax/sarco®

Spare Parts for the APT10-4.5 Automatic Pump Trap

Spare parts

The spare parts available are shown in heavy outline. Parts drawn in broken line are not supplied as spares.

A Cover gasket	See overleaf
B Inlet check valve	See overleaf
C Spring and actuator arm	See overleaf
D Floats	See overleaf
E Trap and outlet check valve mechanism	See overleaf
F Inlet/exhaust valve and seats	See overleaf


Please note:

For customer convenience, spares are supplied in kits to ensure all the appropriate replacement parts are available e.g. when an inlet/exhaust valve and seat assembly is ordered, all replacement split pins, washers and gaskets will be provided in addition to the key components listed.

How to order spares

Always order spares by using the description given.

Example: 1 - Inlet/exhaust valve and seat kit for a Spirax Sarco 3/4" x 3/4".

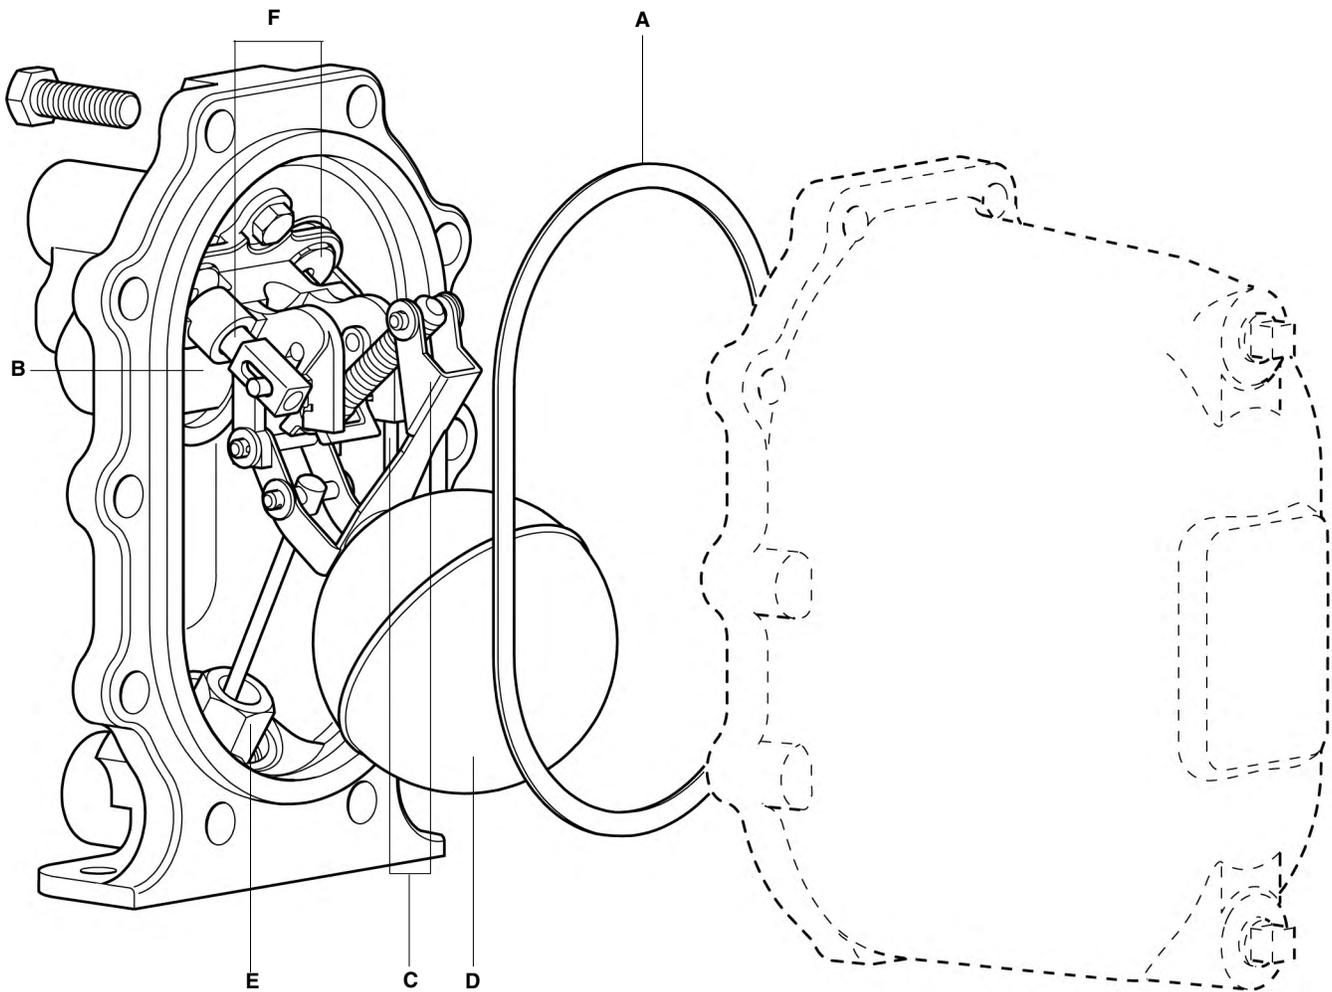

Local regulation may restrict the use of this product below the conditions quoted. Limiting conditions refer to standard connections only.

In the interests of development and improvement of the product, we reserve the right to change the specification.

TI-P612-29-US 01.05

Spare Parts for the APT10-4.5 Automatic Pump Trap

Spare parts

The spare parts available are shown in heavy outline. Parts drawn in broken line are not supplied as spares.

A Cover gasket	2
B Inlet check valve	2, 12
C Spring and actuator arm	2, 14, 24
D Floats	2, 5, 6, 21
E Trap and outlet check valve mechanism	2, 8, 9, 10, 21, 22, 23
F Inlet/exhaust valve and seats	2, 16, 17, 18, 19

Refer to TIS 5.2301 for component number details.


Please note:

For customer convenience, spares are supplied in kits to ensure all the appropriate replacement parts are available e.g. when an inlet/exhaust valve and seat assembly is ordered, all replacement split pins, washers and gaskets will be provided in addition to the key components listed.


How to order spares

Always order spares by using the description given.


Example: 1 - Inlet/exhaust valve and seat kit for a Spirax Sarco 3/4" x 3/4".

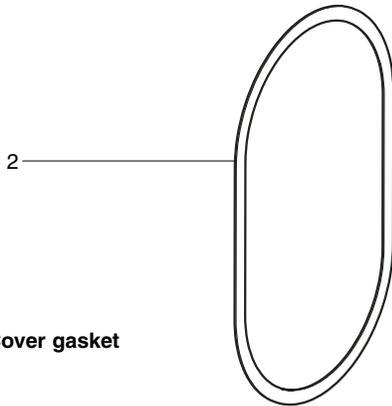


A Cover gasket

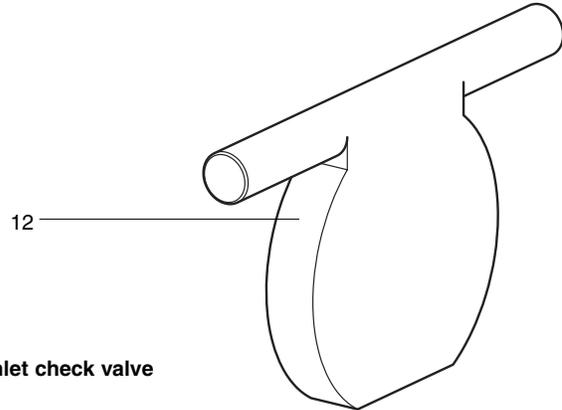


B Inlet check valve

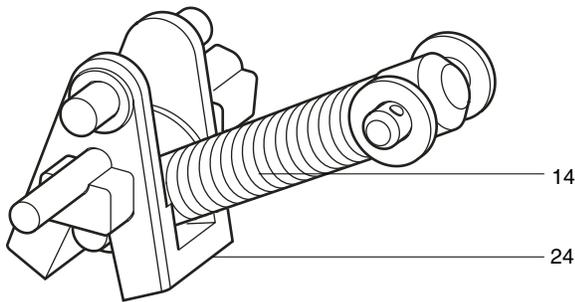


C Spring and actuator arm

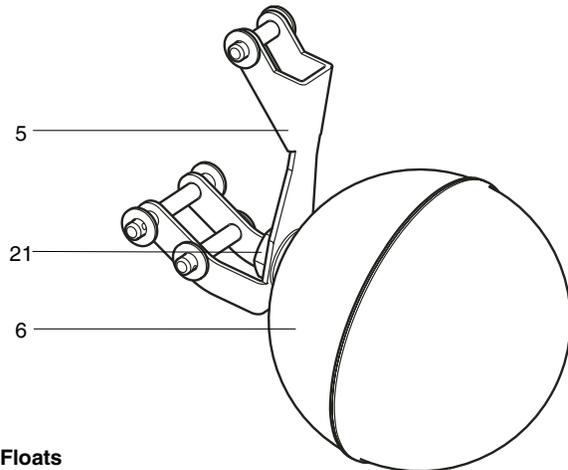

D Floats

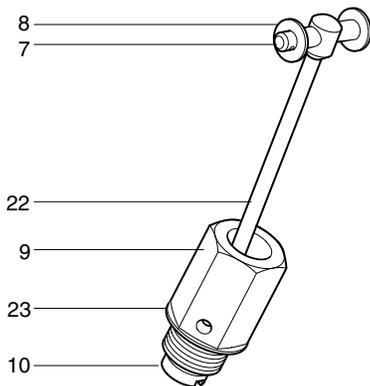

E Trap and outlet check valve mechanism

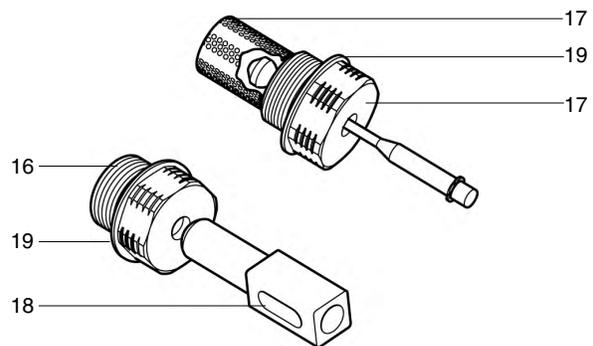

F Inlet / exhaust valve and seats